

## HUB GEAR CABLE 3-SPEED S TYPE FOR UNDER-BAR SHIFTER

- OUTER LENGTH 1220mm (marked **HUB-3-S**)
- INNER LENGTH 1379mm
- Compatible with S Type bar & Brompton under-bar 3-speed shifter **ONLY**

### REMOVING THE GEAR CABLE

- Select gear 3 on the shifter, backpedal to engage the hub
- Unscrew the indicator chain locknut (fig. 1)
- Unscrew the indicator chain from the gear cable anchor
- Undo the gear cable anchor clamp nut and release the inner gear cable
- If there is a cable crimp fitted to the cable end you will need to remove this, then pull the cable out of the clamp
- Pull the cable housing away from the shifter
- Remove the inner cable from the cable housing
- Select gear 1 and then press the shift lever downward so it does not obscure the cable entry hole
- Feed the gear cable through the shifter so that the cable nipple ejects from the cable entry hole
- If there is resistance pushing the cable through the bush pull the cable back a little and try again
- Keep feeding the cable through until the cable can be fully removed from the shifter

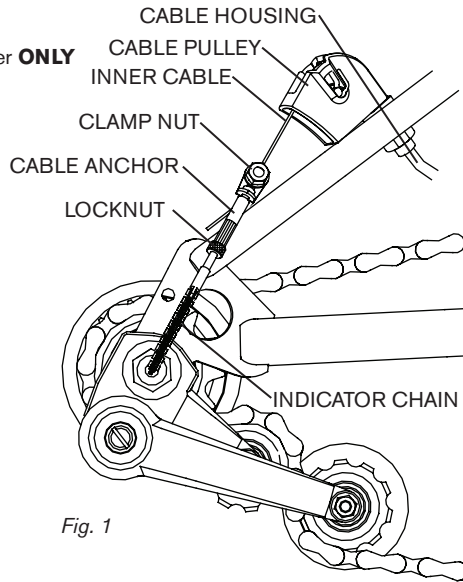


Fig. 1

### FITTING A NEW CABLE

- Select gear 1 and then press the shift lever downward so it does not obscure the cable entry hole (fig. 2)
- Feed the gear cable into the shifter and through the cable bush
- If there is resistance pushing the cable through the bush pull the cable back a little and try again
- Once you can feel the cable pass through the bush keep feeding it until you feel slight resistance
- Keep feeding it through so that it follows around the guide inside the shifter and exits through the cable barrel

**DO NOT FORCE THE CABLE AS THIS MAY DAMAGE THE SHIFTER**

