 
 


OPTIONEN / OPTIONS

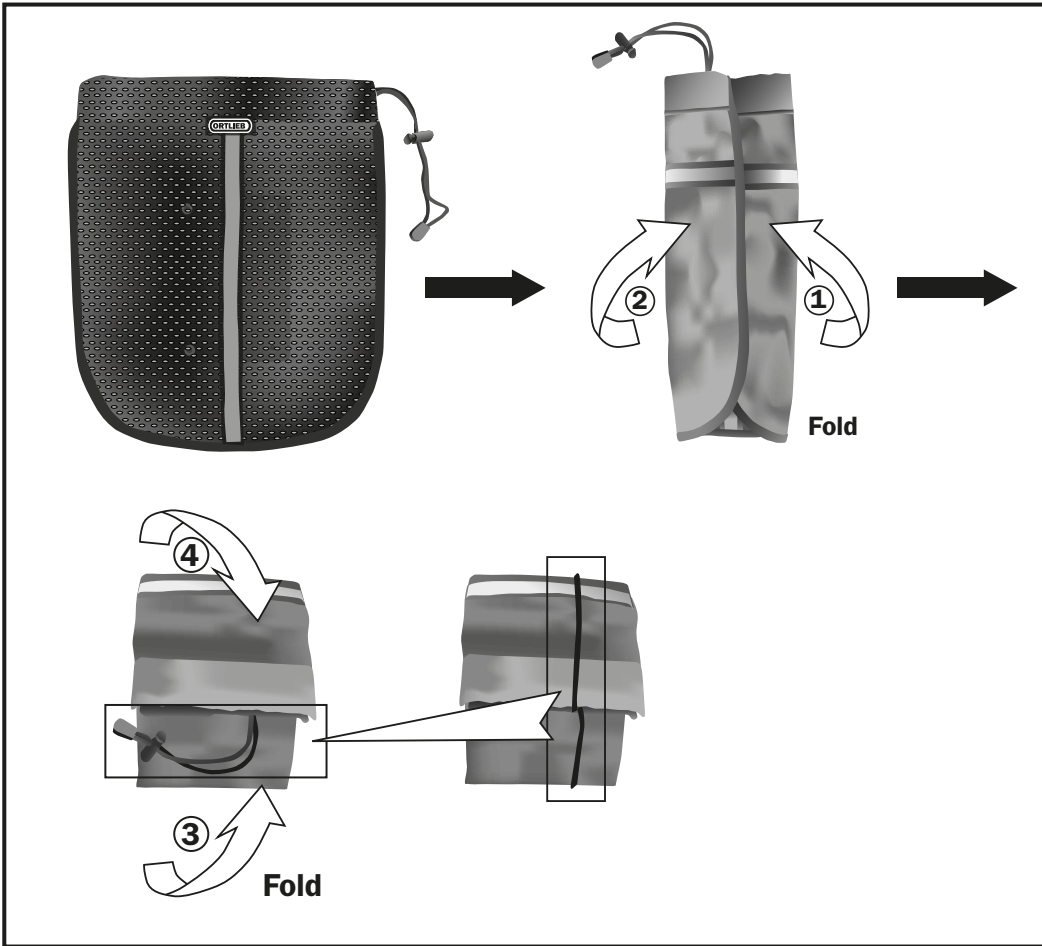

ACCESSORIES

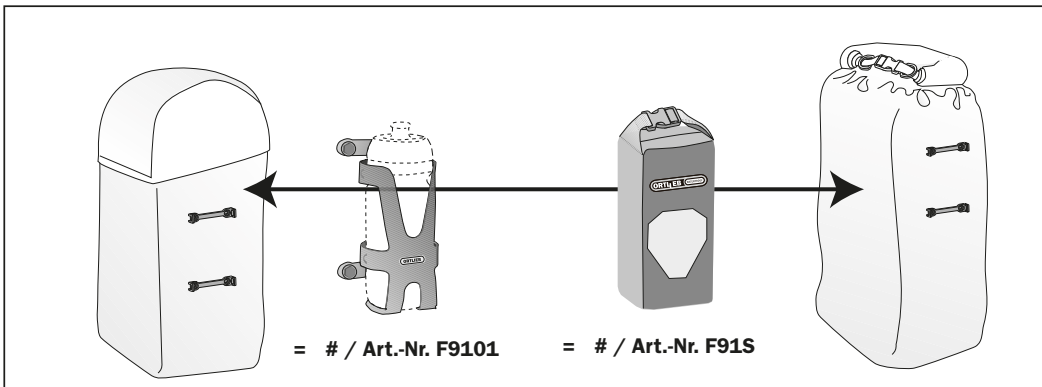


NETZAUSSENTASCHE MESH OUTER POCKET

ORTLIEB WATERPROOF


- | | | | |
|----|--------------------------|----|---------------------------|
| DE | MONTAGEANWEISUNG: | ES | INSTRUCCIONES DE MONTAJE: |
| EN | ASSEMBLY INSTRUCTIONS: | SE | MONTERINGSANVISNING: |
| FR | INSTRUCTIONS DE MONTAGE: | NO | MONTERINGSANVISNING: |
| IT | ISTRUZIONI DI MONTAGGIO: | FI | ASENNUSOHJEET: |
| NL | MONTAGE HANDLEIDING: | PL | INSTRUKCJA MONTAZU: |
| DK | MONTERINGSVEJLEDNING: | JP | 換気の良い所に保管してください。 |



 INHALT:
CONTENTS:
CONTENUTO:
INHOUD:
INDHOLD:
CONTENIDO:
INNEHÅLL:
INNHOLD:
SISÄLLYS:
ZAWARTOSC:
内容物

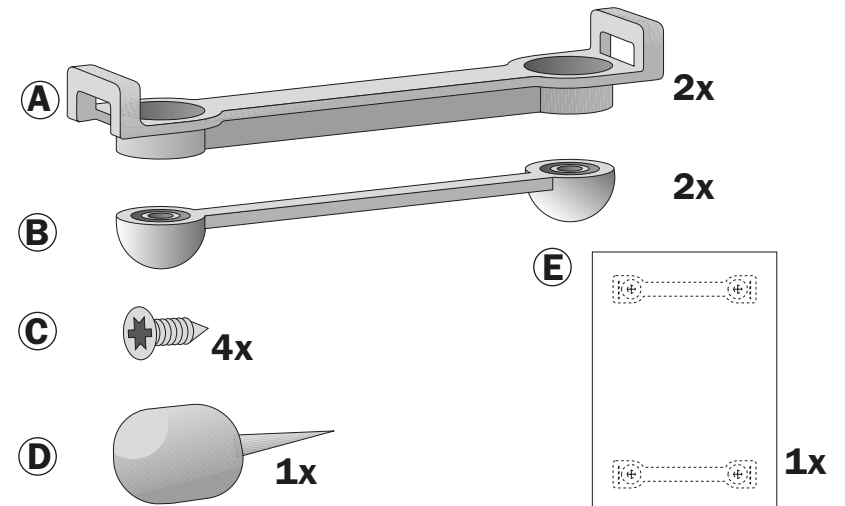


OPTION

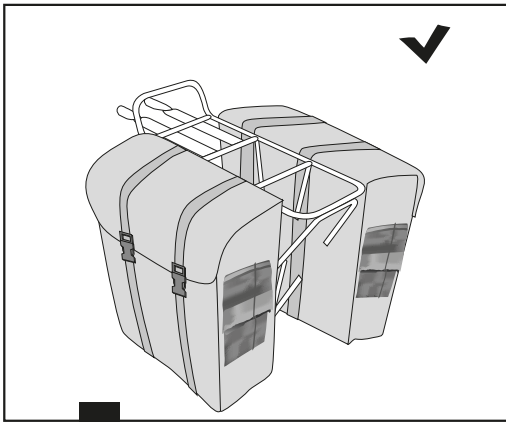 


OPTION



 
1

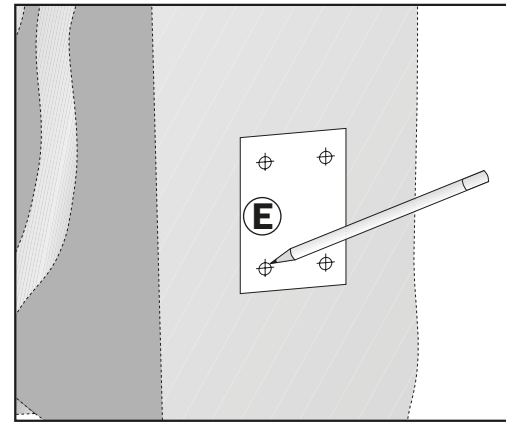


2

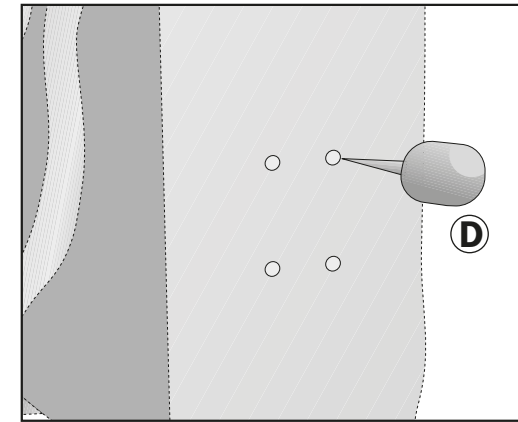 


Ortlieb Back-Roller Classic, Plus, City

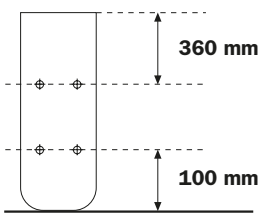 


Ortlieb Bike-Packer Classic, Plus

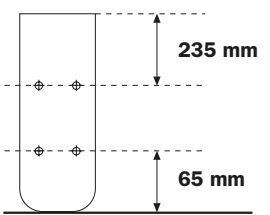 


Ortlieb Bike-Shopper

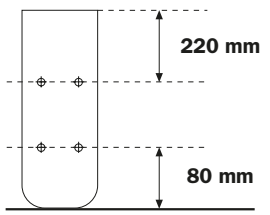 


Ortlieb Bike-Tourer

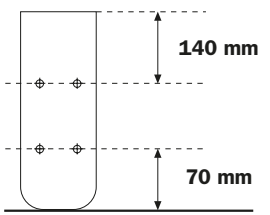 


Ortlieb Velo-Shopper

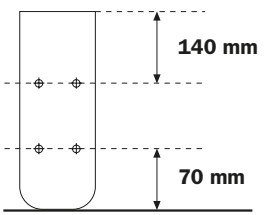 


Ortlieb Sport-Roller Classic, Plus

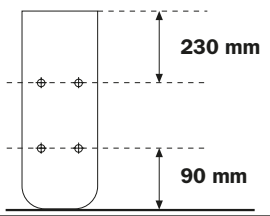 


Ortlieb Sport-Packer Classic, Plus

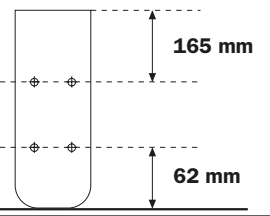 


Ortlieb Downtown

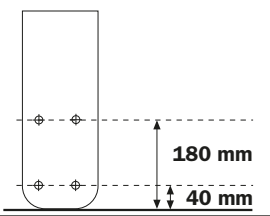 

3

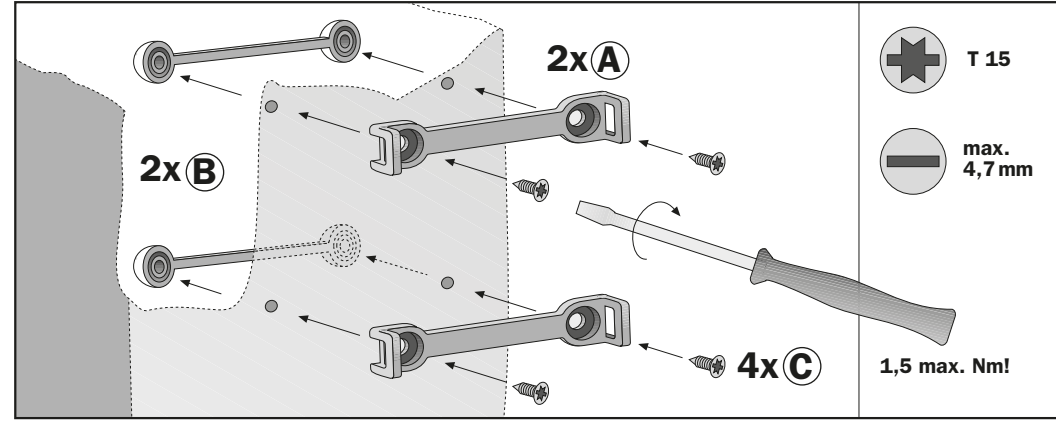 

4

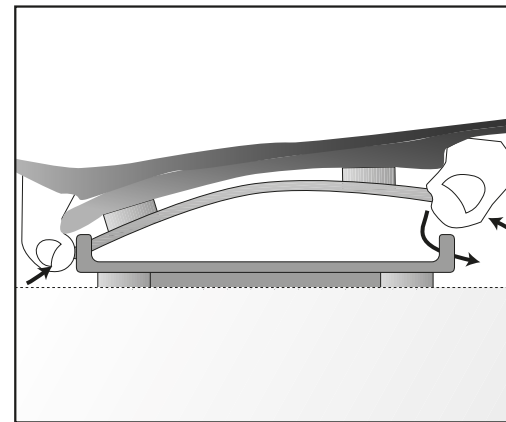 

5

